


Shutoff Nozzle Tip

- Minimize nozzle drool and sink patterns
- Installs instantly in all 7/8-14 nozzle bodies (body not included)
- The spring loaded valve in the nozzle tip restricts of material until activated by pressure
- Opens in the direction of the sprue bushing and closes until recycled

Part Number	Radius	Orifice	Min. Sprue Bushing
SHUTOFF12-116	1/2"	1/16"	7/32"
SHUTOFF12-18		1/8"	9/32"
SHUTOFF12-316		3/16"	5/16"
SHUTOFF34-116	3/4"	1/16"	7/32"
SHUTOFF34-18		1/8"	9/32"
SHUTOFF34-316		3/16"	5/16"

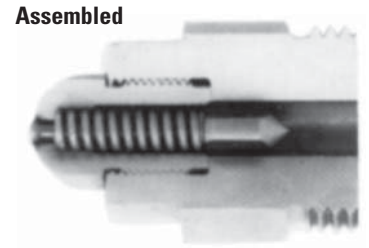

Radius: 1/2 or 3/4 Orifice 1/16, 1/8, 3/16